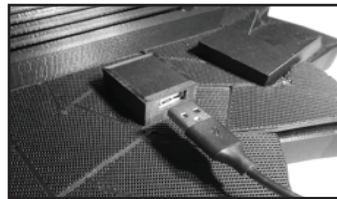# QUICK START GUIDE

Thank you for purchasing an Imperative Light!
This guide will get you up and running quickly.
Consult the included Instruction Book for more details
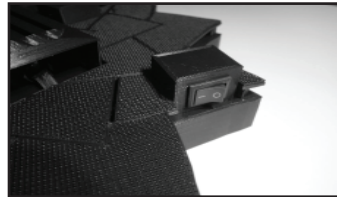
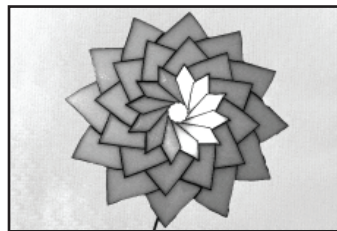**Step 1:** Insert the included adapter into a wall socket.

Step 2: Insert one end of the included USB cable into the adapter, and the other end into the USB socket on your light.

Step 3: Flip the power switch to the "on" position.

Step 4: The light will start up in Showcase mode. Use one of the included remote controls to change the light settings.
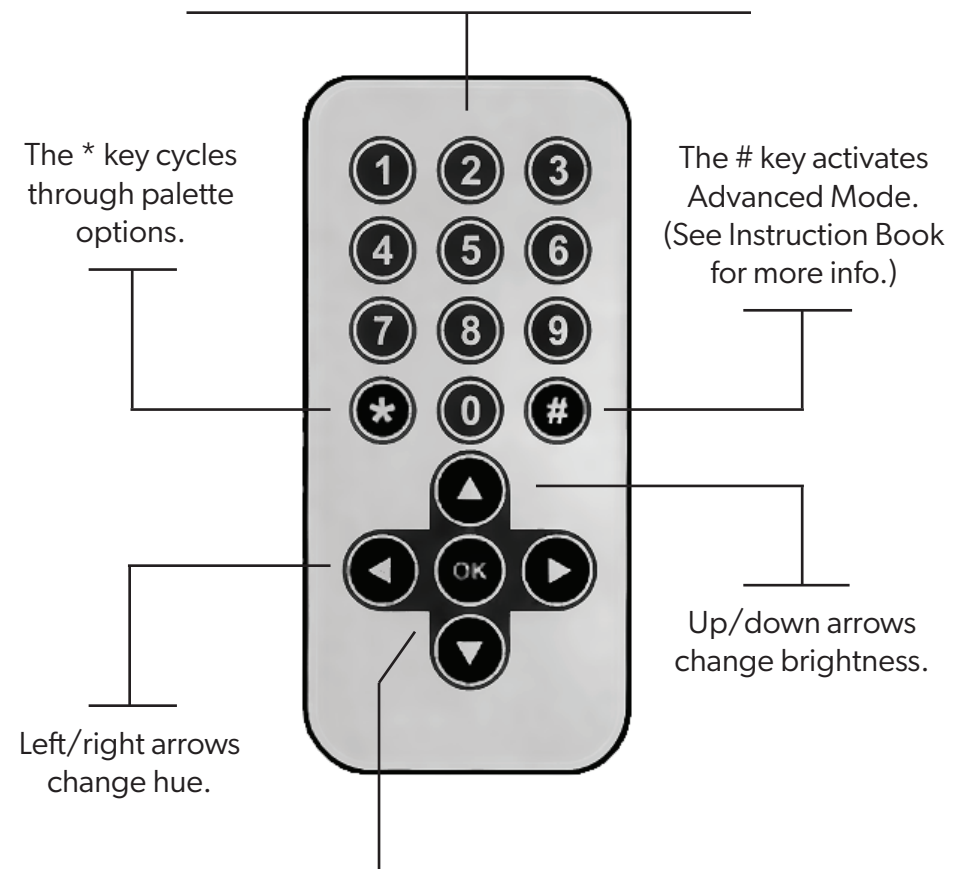
Read the other side of this guide for more information
▼　about the remote control.　▼

REMOTE CONTROL GUIDE

Press a number key to select a light art program.

1 - Shimmer	2 - Pulse	3 - Twirl
4 - Color Pass	5 - Flip Actors	6 - Automata
7 - Sound React	8 - Clock	9 - Game
	0 - Showcase	

Press a number multiple times to load program variants!

The * key cycles through palette options.

The # key activates Advanced Mode. (See Instruction Book for more info.)

Up/down arrows change brightness.

Left/right arrows change hue.

The OK key sets hue/brightness to the default and resets the currently running program.